

Audi A6

Current Flow Diagram


No. 1 / 1

Edition 04.2003

Basic equipment

From model year 2003

Fuse box

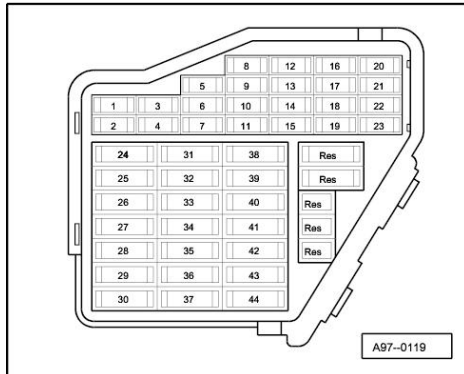

Fuse colours

30 A - green

25 A - white

20 A - yellow

15 A - blue

10 A - red

7.5 A - brown


5 A - beige



Note:

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.


Micro-central electrics

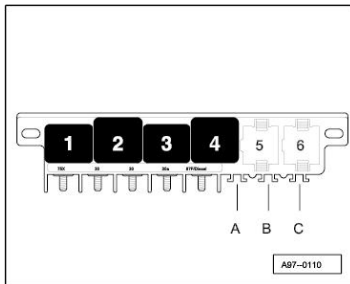

Position of relays

1 - Dual tone horn relay (J4)

- 2 - X contact relief relay (J59)
- 4 - Fuel pump relay (J17)
- 5 - Automatic intermittent wash/wipe relay (J31)
- 6 - Automatic intermittent wash/wipe relay (J31)

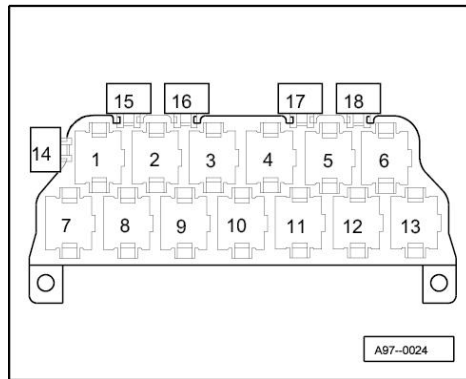
13-point relay carrier**Position of relays**

- 4 - Starter inhibitor relay (J207), automatic gearbox 01V/01L
- 4 - Starter inhibitor and reversing light relay (J226), automatic gearbox: multitronic® 01J

Audi A6

Current Flow Diagram

No. 1 / 2

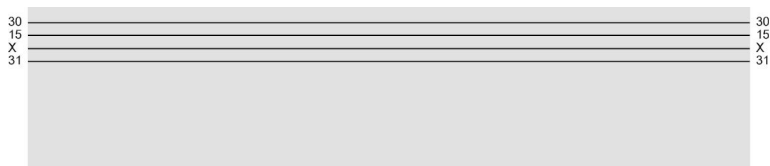


Earth connections

- 3 - Earth strap, engine - body
- 12 - Earth point, in engine compartment, left
- 13 - Earth point, in engine compartment, right
- 43 - Earth point, lower part of right A pillar
- 44 - Earth point, lower part of left A pillar
- 81 - Earth connection -1-, in dash panel wiring harness
- 85 - Earth connection -1-, in engine compartment wiring harness
- 86 - Earth connection -1-, in rear wiring harness
- 176 - Earth connection, in right headlight wiring harness
- 179 - Earth connection, in left headlight wiring harness
- 213 - Earth connection -4-, in dash panel wiring harness

- * - Models without trailer coupling
- ** - Models with trailer coupling

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

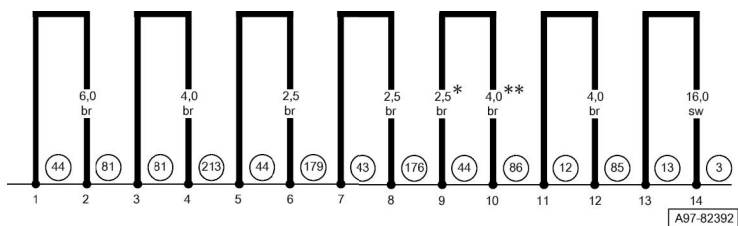


A97-82392

Audi A6

Current Flow Diagram

No. 1 / 3

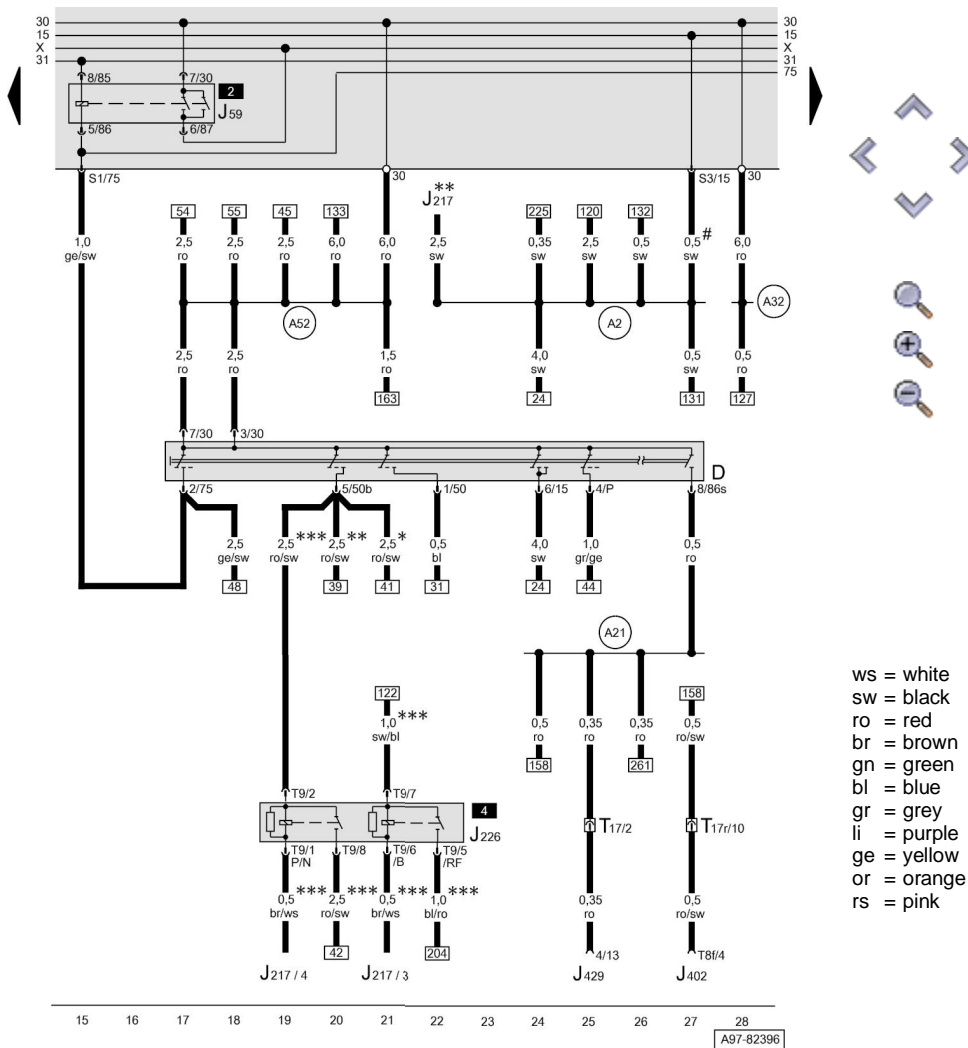

Ignition/starter switch, X contact relief relay, starter inhibitor and reversing light relay

relay


- D - Ignition/starter switch
- J59 - X contact relief relay
- J217 - Automatic gearbox control unit
- J226 - Starter inhibitor and reversing light relay
- J402 - Operating electronics control unit, navigation
- J429 - Central locking control unit
- T8f - 8-pin connector, black, radio connector III
- T17 - 17-pin connector, orange, connector point, A pillar, right
- T17r - 17-pin connector, white, behind dash panel, centre
- A2 - Positive (+) connection (15), in dash panel wiring harness
- A21 - Connection (86s), in dash panel wiring harness
- A32 - Positive (+) connection (30), in dash panel wiring harness
- A52 - Positive (+) connection 2 (30), in dash panel wiring harness
- * - Models with manual gearbox
- ** - Models with automatic gearbox 01V/01L
- *** - Models with automatic gearbox: multitronic® 01J
- # - Models with petrol engine

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Audi A6

Current Flow Diagram

No. 1 / 4

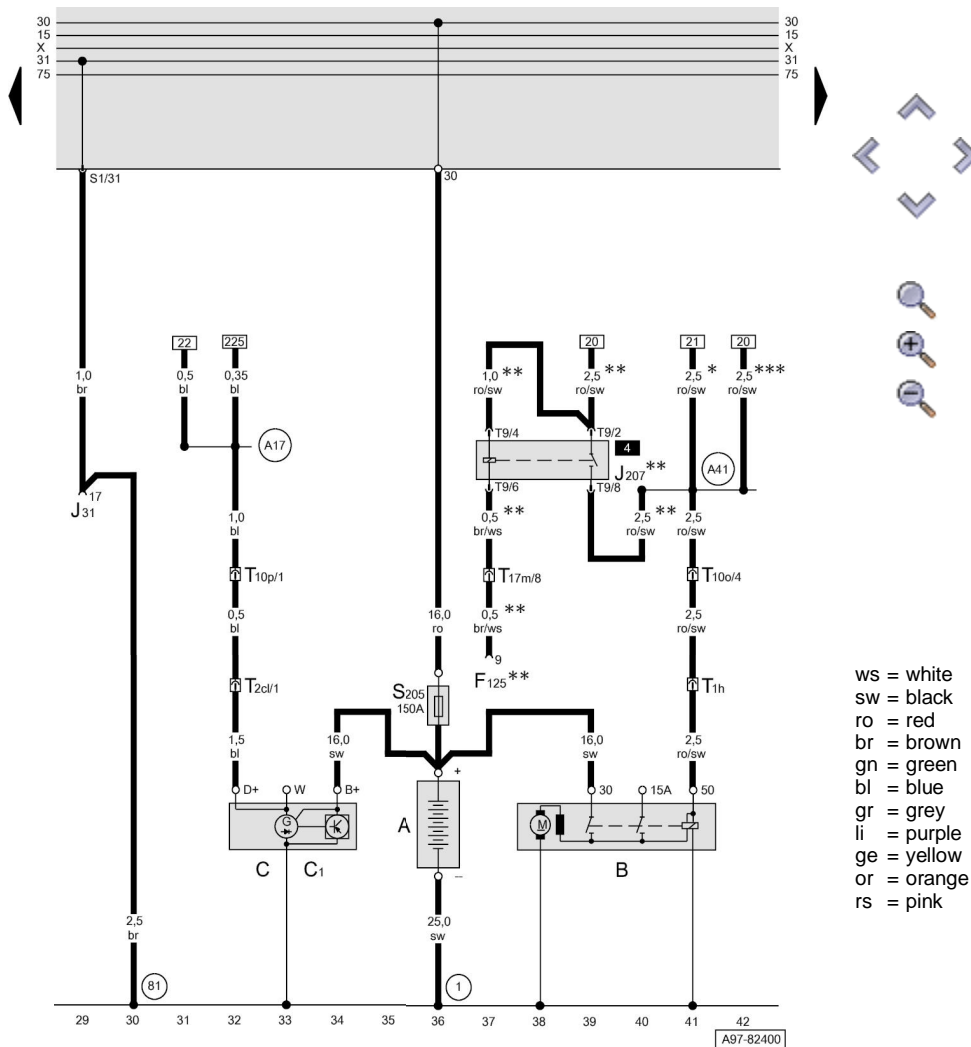


Battery, starter, alternator, starter inhibitor relay

- A - Battery
- B - Starter
- C - Alternator
- C1 - Voltage regulator
- F125 - Multi-function switch
- J31 - Automatic intermittent wash/wipe relay
- J207 - Starter inhibitor relay
- S205 - Fuse -2- (30)
- T1h - Single connector, black, in engine compartment, right
- T2cl - 2-pin connector, black, in engine compartment, right
- T9 - 9-pin connector, brown, at starter inhibitor relay
- T10o - 10-pin connector, brown, connector point, electronics box, plenum chamber
- T10p - 10-pin connector, black, connector point, electronics box, plenum chamber
- T17m - 17-pin connector, blue, connector point, A pillar, right
- 1 - Earth strap, battery - body
- 81 - Earth connection -1-, in dash panel wiring harness
- A17 - Connection (61), in dash panel wiring harness
- A41 - Positive (+) connection (50), in dash panel wiring harness
- * - Models with manual gearbox
- ** - Models with automatic gearbox 01V/01L
- *** - Models with automatic gearbox: multitronic® 01J

Audi A6

Current Flow Diagram

No. 1 / 5

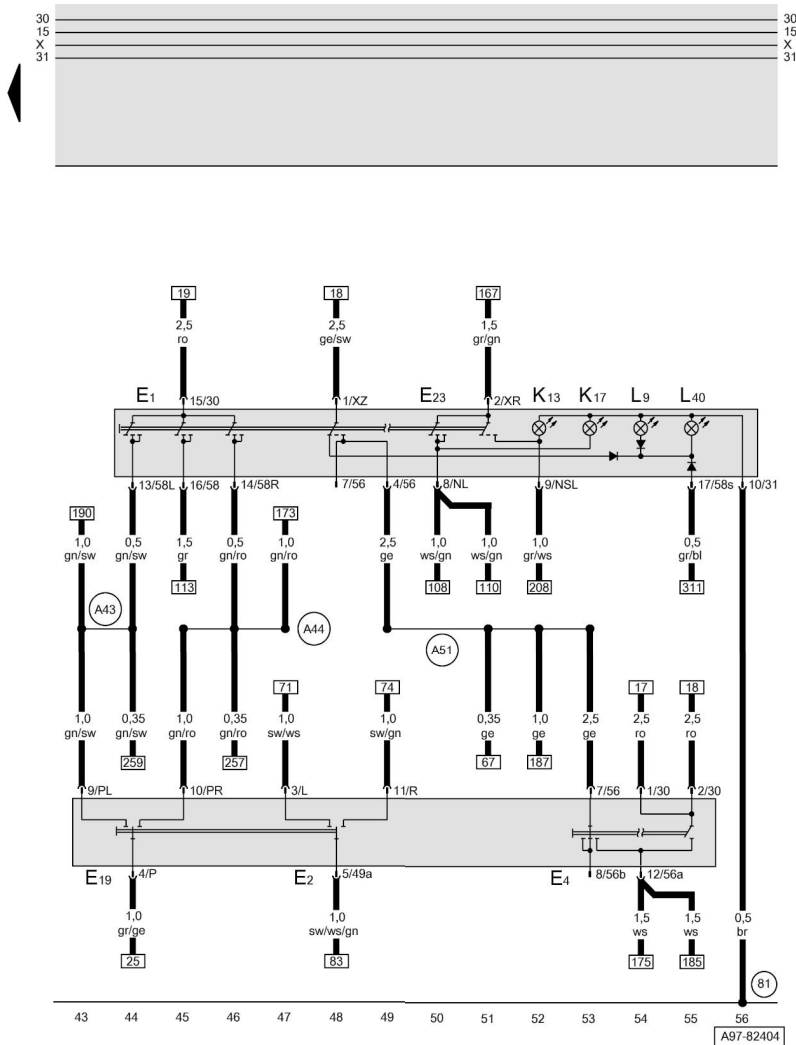

Lighting switch, left steering column switch, front and rear fog light switch


- E1 - Lighting switch
- E2 - Turn signal switch
- E4 - Headlight dipper/flasher switch
- E19 - Parking light switch
- E23 - Front and rear fog light switch
- K13 - Rear fog light warning lamp
- K17 - Fog light warning lamp
- L9 - Lighting switch light bulb
- L40 - Front and rear fog light switch illumination bulb
- 81 - Earth connection -1-, in dash panel wiring harness

- A43 - Connection (57L), in dash panel wiring harness
- A44 - Connection (57R), in dash panel wiring harness
- A51 - Connection (56), in dash panel wiring harness

Audi A6

Current Flow Diagram

No. 1 / 6

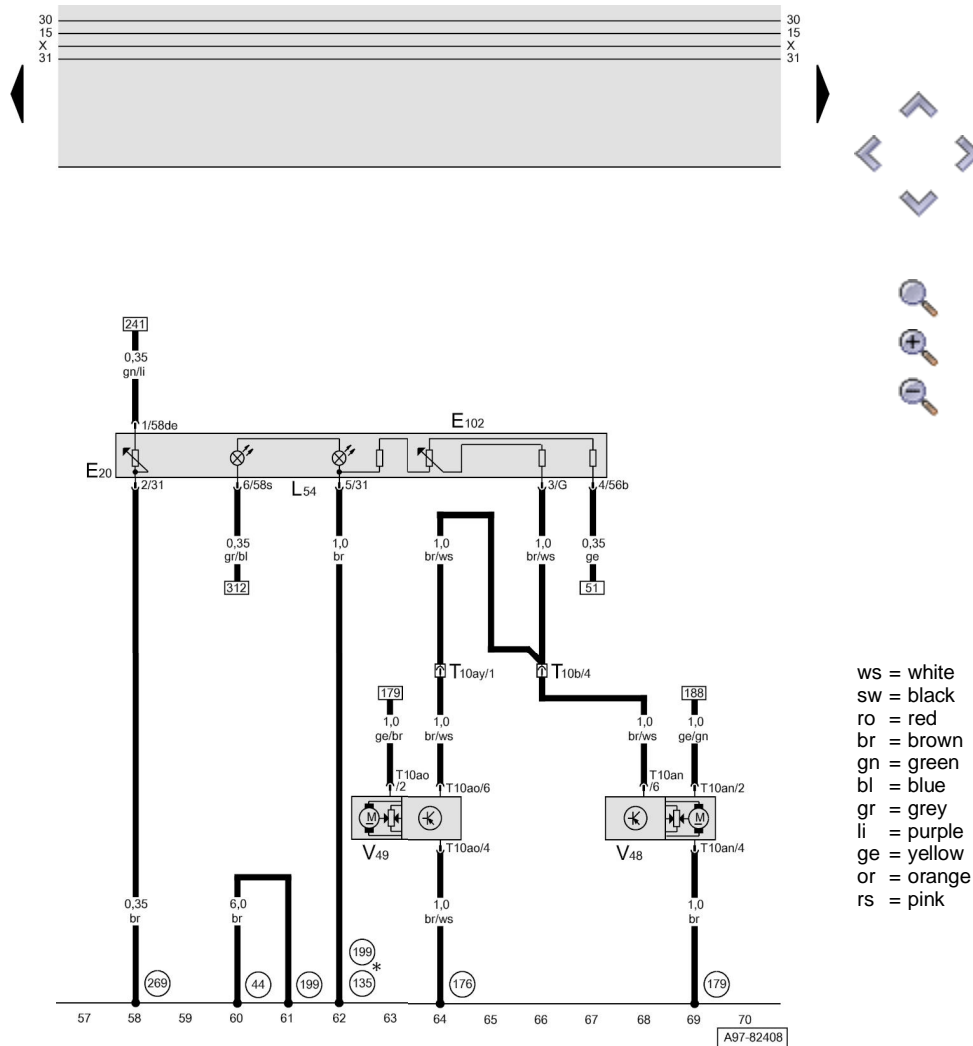


Switches and instruments light regulator, headlight range control

- E20 - Switches and instruments light regulator
- E102 - Headlight range control adjuster
- L54 - Headlight range control adjuster light bulb
- T10b - 10-pin connector, red, connector point, A pillar, left
- T10an - 10-pin connector, on headlight, left
- T10ao - 10-pin connector, on headlight, right
- T10ay - 10-pin connector, pink, connector point, A pillar, right
- V48 - Headlight range control motor, left
- V49 - Headlight range control motor, right
- 44 - Earth point, lower part of left A pillar
- 135 - Earth connection -2-, in dash panel wiring harness
- 176 - Earth connection, in right headlight wiring harness
- 179 - Earth connection, in left headlight wiring harness
- 199 - Earth connection -3-, in dash panel wiring harness
- 269 - Earth connection (sender earth) -1-, in dash panel wiring harness
- * - Both possible

Audi A6

Current Flow Diagram

No. 1 / 7

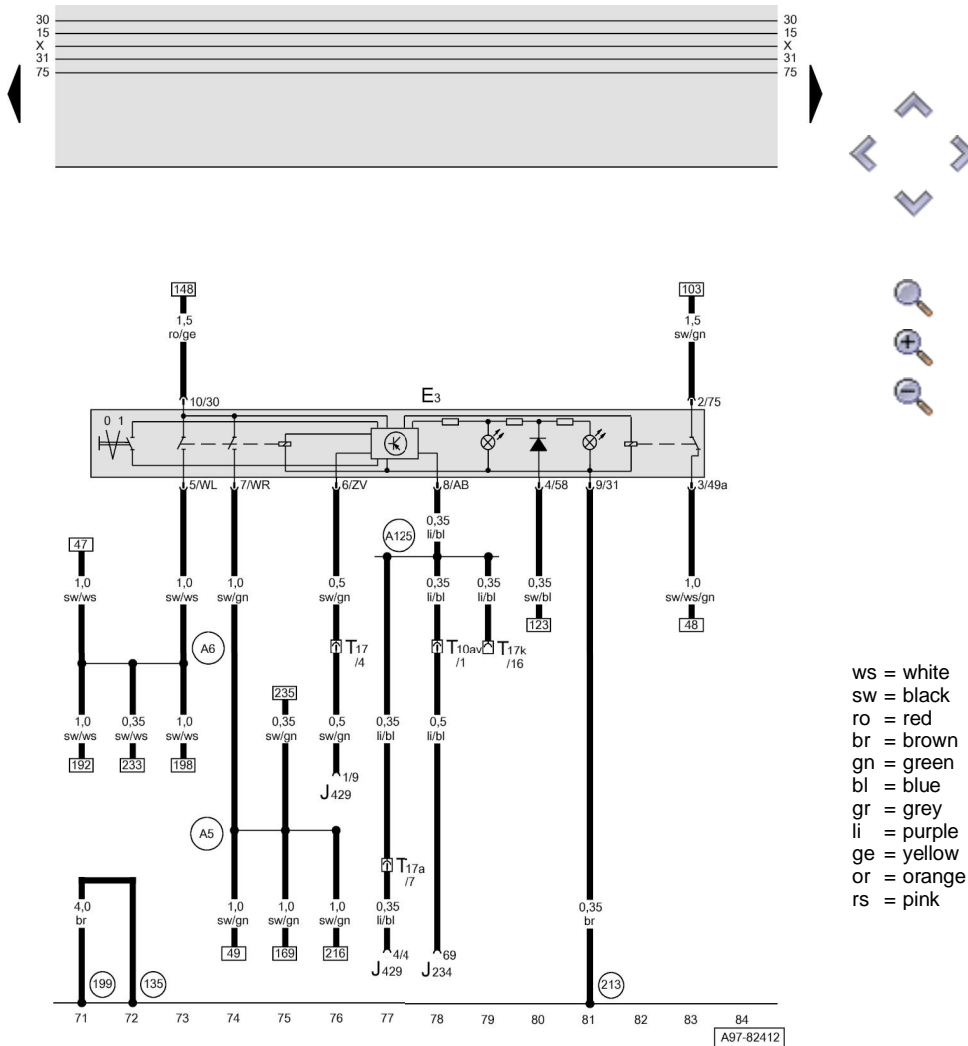


Hazard warning light switch

- E3 - Hazard warning light switch
- J234 - Airbag control unit
- J429 - Central locking control unit
- T10av - 10-pin connector, yellow, connector point, A pillar, right
- T17 - 17-pin connector, orange, connector point, A pillar, right
- T17a - 17-pin connector, brown, connector point, A pillar, right
- T17k - 17-pin connector, red, connector point, electronics box, plenum chamber
- 135 - Earth connection -2-, in dash panel wiring harness
- 199 - Earth connection -3-, in dash panel wiring harness
- 213 - Earth connection -4-, in dash panel wiring harness
- A5 - Positive (+) connection (right turn signal), in dash panel wiring harness
- A6 - Positive (+) connection (left turn signal), in dash panel wiring harness
- A125 - Connection (crash signal), in dash panel wiring harness

Audi A6

Current Flow Diagram

No. 1 / 8

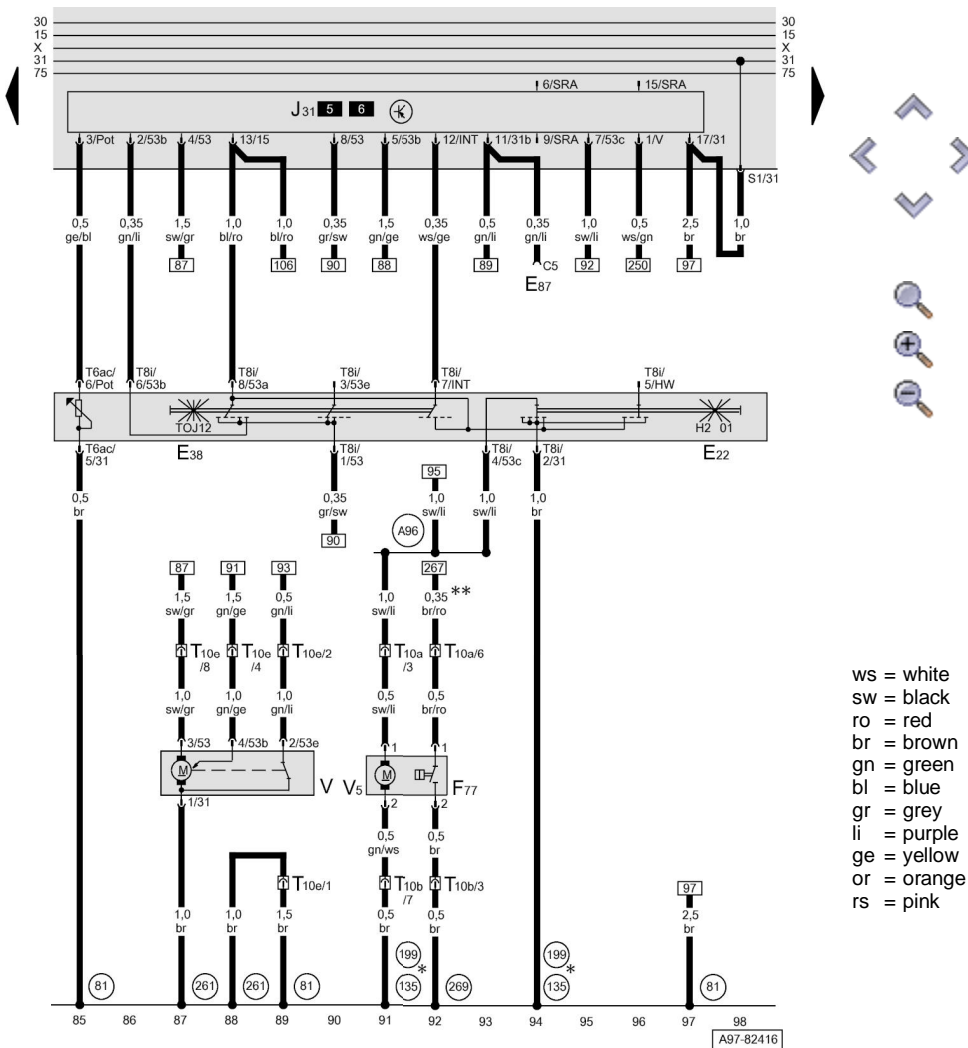


Windscreen washer/wiper system

- E22 - Intermittent wiper switch
- E38 - Intermittent wiper control
- E87 - Control and display unit for air conditioner
- F77 - Windscreen washer fluid warning contact
- J31 - Automatic intermittent wash/wipe relay
- T6ac - 6-pin connector, brown, on intermittent wiper control
- T8i - 8-pin connector, black, at wiper switch
- T10a - 10-pin connector, pink, connector point, A pillar, left
- T10b - 10-pin connector, red, connector point, A pillar, left
- T10e - 10-pin connector, purple, connector point, A pillar, left
- V - Windscreen wiper motor
- V5 - Windscreen washer pump
- 81 - Earth connection -1-, in dash panel wiring harness
- 135 - Earth connection -2-, in dash panel wiring harness
- 199 - Earth connection -3-, in dash panel wiring harness
- 261 - Earth connection, in heated washer jet wiring harness
- 269 - Earth connection (sender earth) -1-, in dash panel wiring harness
- A96 - Connection (53c), in dash panel wiring harness
- * - Both possible
- ** - Models with driver information system

Audi A6

Current Flow Diagram

No. 1 / 9

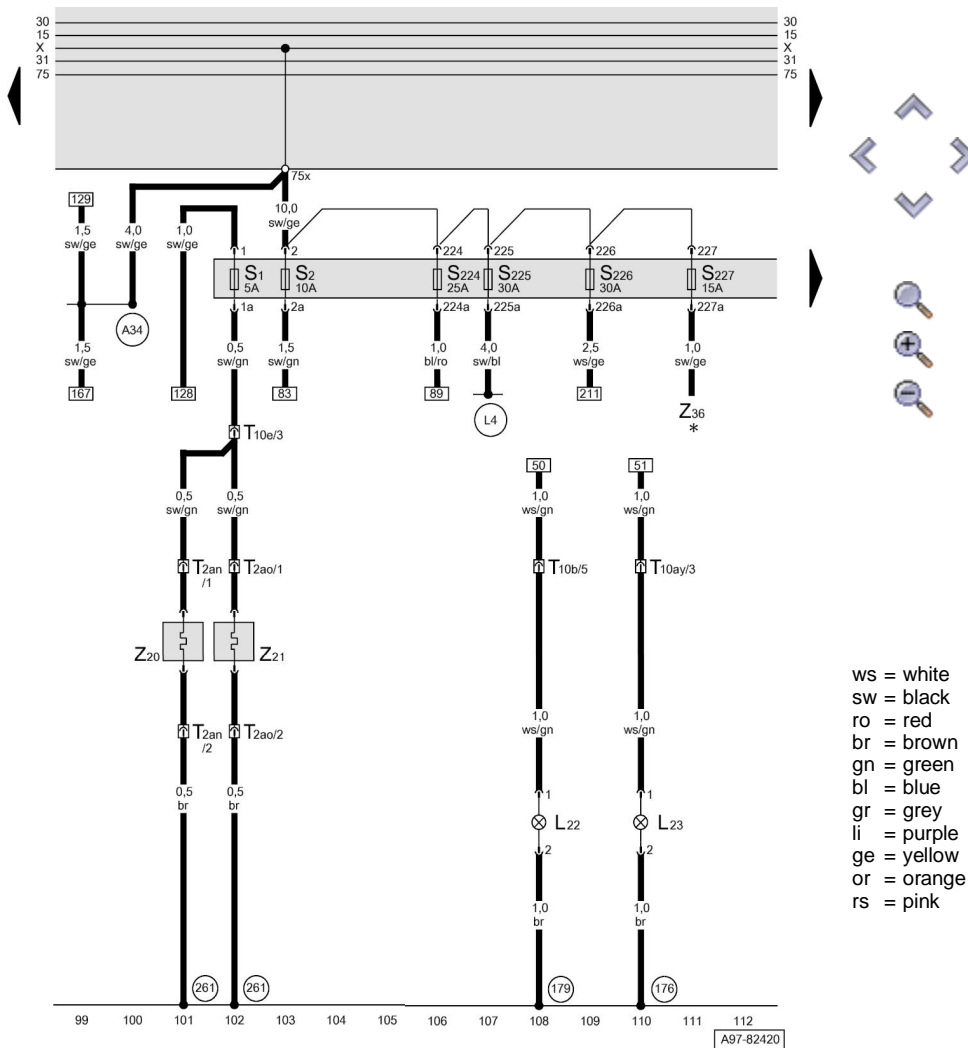

Fuse box, heated washer jets, front fog lights

- L22 - Fog light bulb, left
- L23 - Fog light bulb, right
- S1 - Fuse in fuse box
- S2 - Fuse in fuse box
- S224 - Fuse 24 in fuse box
- S225 - Fuse 25 in fuse box
- S226 - Fuse 26 in fuse box
- S227 - Fuse 27 in fuse box
- T2an - 2-pin connector, washer jet, left
- T2ao - 2-pin connector, washer jet, right
- T10b - 10-pin connector, red, connector point, A pillar, left
- T10e - 10-pin connector, purple, connector point, A pillar, left
- T10ay - 10-pin connector, pink, connector point, A pillar, right
- Z20 - Heater element, left washer jet
- Z21 - Heater element, right washer jet
- Z36 - Heated steering wheel
- 176 - Earth connection, in right headlight wiring harness
- 179 - Earth connection, in left headlight wiring harness
- 261 - Earth connection, in heated washer jet wiring harness
- A34 - Connection (75x), in dash panel wiring harness
- L4 - Connection (75 al), in air conditioner wiring harness
- * - Models with heated steering wheel

Current Flow Diagram

No. 1 / 10



ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink


Fuse box, number plate light, glove box light

- | | |
|------|---|
| E26 | - Glove box light switch |
| E87 | - Control and display unit for air conditioner |
| J429 | - Central locking control unit |
| S3 | - Fuse in fuse box |
| S4 | - Fuse in fuse box |
| S5 | - Fuse in fuse box |
| S6 | - Fuse in fuse box |
| S7 | - Fuse in fuse box |
| S231 | - Fuse 31 in fuse box |
| T2ap | - 2-pin connector, black, behind dash panel, right |
| T8l | - 8-pin connector, behind dash panel, right |
| T10f | - 10-pin connector, brown, connector point, A pillar, left |
| T17a | - 17-pin connector, brown, connector point, A pillar, right |
| W6 | - Glove box light |
| X | - Number plate light |
| 81 | - Earth connection -1-, in dash panel wiring harness |
| 87 | - Earth connection -2-, in rear wiring harness |
| A20 | - Connection (15a), in dash panel wiring harness |
| A38 | - Positive (+) connection -2- (15a), in dash panel wiring harness |
| A53 | - Positive (+) connection (58), in dash panel wiring harness |
| * | - Models with manual gearbox |
| ** | - Models with automatic gearbox 01V/01L |
| *** | - Models with automatic gearbox: multitronic® 01J |

Audi A6

Current Flow Diagram

No. 1 / 11

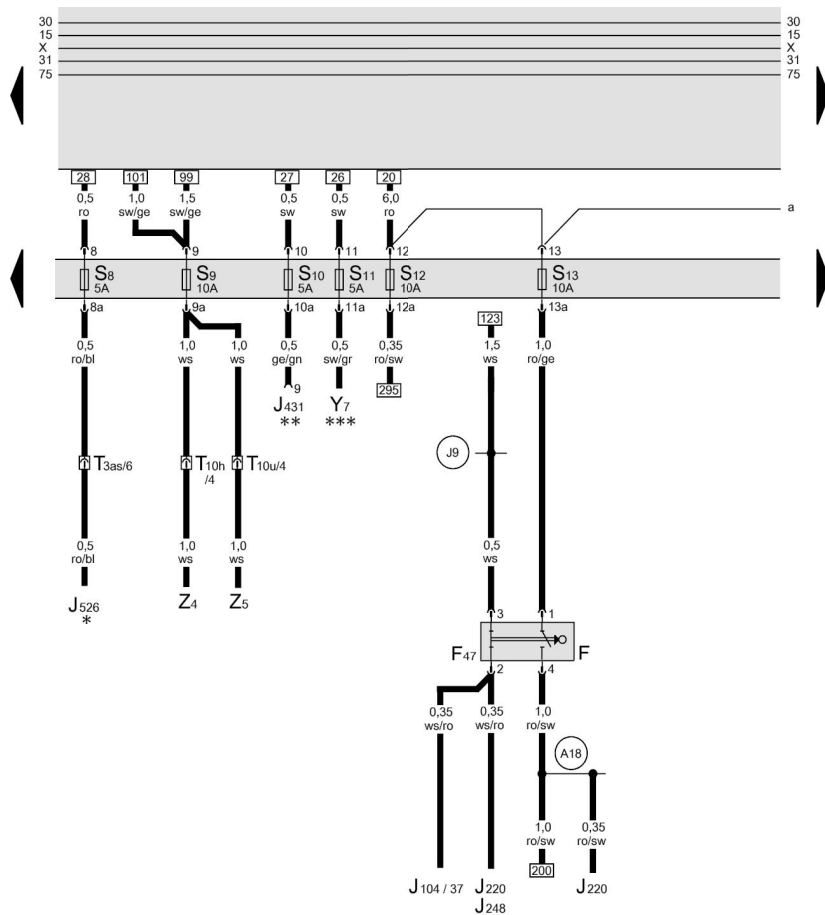

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


Fuse box, heated exterior mirror, brake light switch

- F - Brake light switch
- F47 - Cruise control system brake pedal switch (diesel direct injection system)
- J104 - ABS with EDL control unit
- J220 - Motronic control unit
- J248 - Diesel direct injection system control unit
- J431 - Headlight range control, control unit
- J526 - Telephone/telematics control unit
- S8 - Fuse in fuse box
- S9 - Fuse in fuse box
- S10 - Fuse in fuse box
- S11 - Fuse in fuse box
- S12 - Fuse in fuse box
- S13 - Fuse in fuse box
- T3as - 3-pin connector, blue, connector point, A pillar, left
- T10h - 10-pin connector, black, connector point, A pillar, left
- T10u - 10-pin connector, black, connector point, A pillar, right
- Y7 - Automatic anti-dazzle interior mirror
- Z4 - Heated exterior mirror, driver's side
- Z5 - Heated exterior mirror, front passenger's side
- A18 - Connection (54), in dash panel wiring harness
- J9 - Connection -1- (15a), in ABS wiring harness
- * - Models with telephone, telematics
- ** - Models with automatic dynamic headlight range control
- *** - Models with automatic anti-dazzle interior mirror

Audi A6

Current Flow Diagram

No. 1 / 12

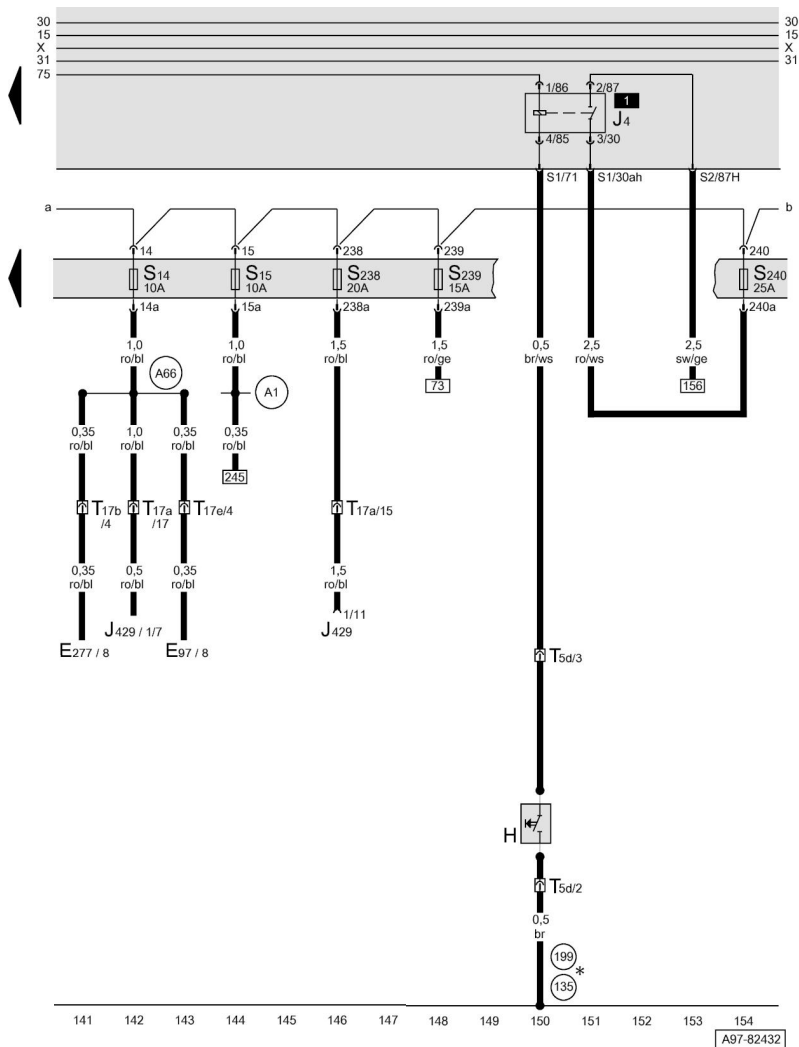

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


Fuse box, horn relay

- E97 - Memory operating unit
- E277 - Memory operating unit, front passenger's seat
- H - Horn plate
- J4 - Dual tone horn relay
- J429 - Central locking control unit
- S14 - Fuse in fuse box
- S15 - Fuse in fuse box
- S238 - Fuse 38 in fuse box
- S239 - Fuse 39 in fuse box
- S240 - Fuse 40 in fuse box
- T5d - 5-pin connector, yellow, behind steering column switch trim
- T17a - 17-pin connector, brown, connector point, A pillar, right
- T17b - 17-pin connector, black, connector point, A pillar, right
- T17e - 17-pin connector, black, connector point, A pillar, left
- 135 - Earth connection -2-, in dash panel wiring harness
- 199 - Earth connection -3-, in dash panel wiring harness
- A1 - Positive (+) connection (30a), in dash panel wiring harness
- A66 - Connection (30a, (ZV/DWA/IR (central locking/anti-theft alarm system/infra-red remote control))), in dash panel wiring harness
- * - Both possible

Audi A6

Current Flow Diagram

No. 1 / 13

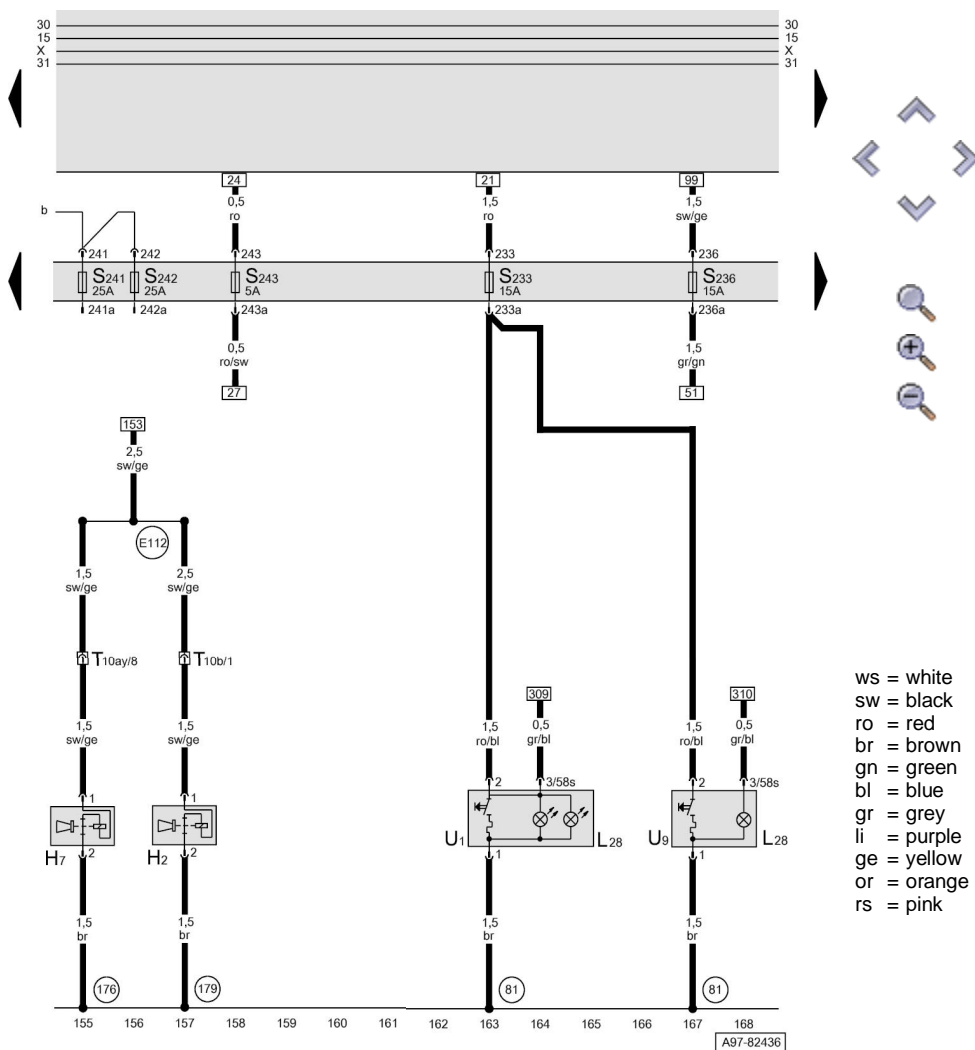


Fuse box, front and rear cigarette lighters, horn

- H2 - High tone horn
- H7 - Low tone horn
- L28 - Cigarette lighter light bulb
- S233 - Fuse 33 in fuse box
- S236 - Fuse 36 in fuse box
- S241 - Fuse 41 in fuse box
- S242 - Fuse 42 in fuse box
- S243 - Fuse 43 in fuse box
- T10b - 10-pin connector, red, connector point, A pillar, left
- T10ay - 10-pin connector, pink, connector point, A pillar, right
- U1 - Cigarette lighter
- U9 - Cigarette lighter, rear
- 81 - Earth connection -1-, in dash panel wiring harness
- 176 - Earth connection, in right headlight wiring harness
- 179 - Earth connection, in left headlight wiring harness
- E112 - Connection (horn-87 h), in dash panel wiring harness

Audi A6

Current Flow Diagram

No. 1 / 14

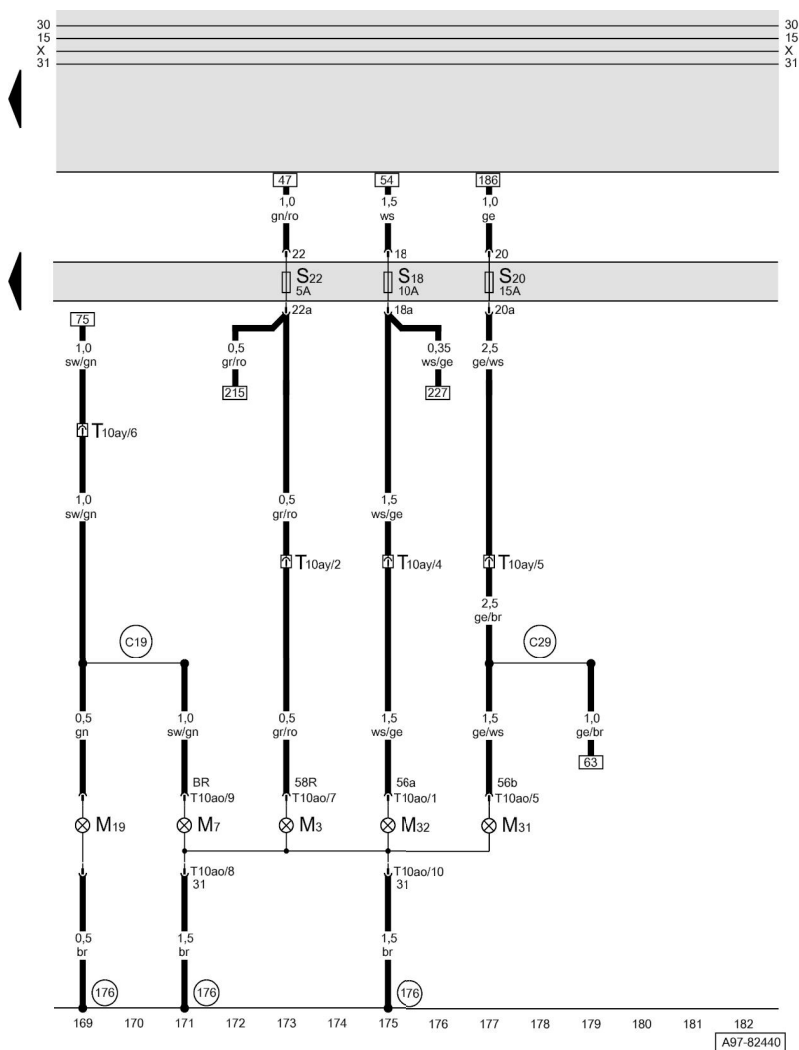
**Fuse box, right headlight**

- M3 - Side light bulb, right
- M7 - Turn signal bulb, front right
- M19 - Side turn signal bulb, right
- M31 - Dipped beam bulb, right
- M32 - Main beam bulb, right
- S18 - Fuse in fuse box
- S20 - Fuse in fuse box
- S22 - Fuse in fuse box
- T10ao - 10-pin connector, on headlight, right
- T10ay - 10-pin connector, pink, connector point, A pillar, right
- 176 - Earth connection, in right headlight wiring harness
- C19 - Connection -1- (turn signal, right), in headlight wiring harness
- C29 - Connection -2- (56b), in headlight wiring harness

Audi A6

Current Flow Diagram


No. 1 / 15

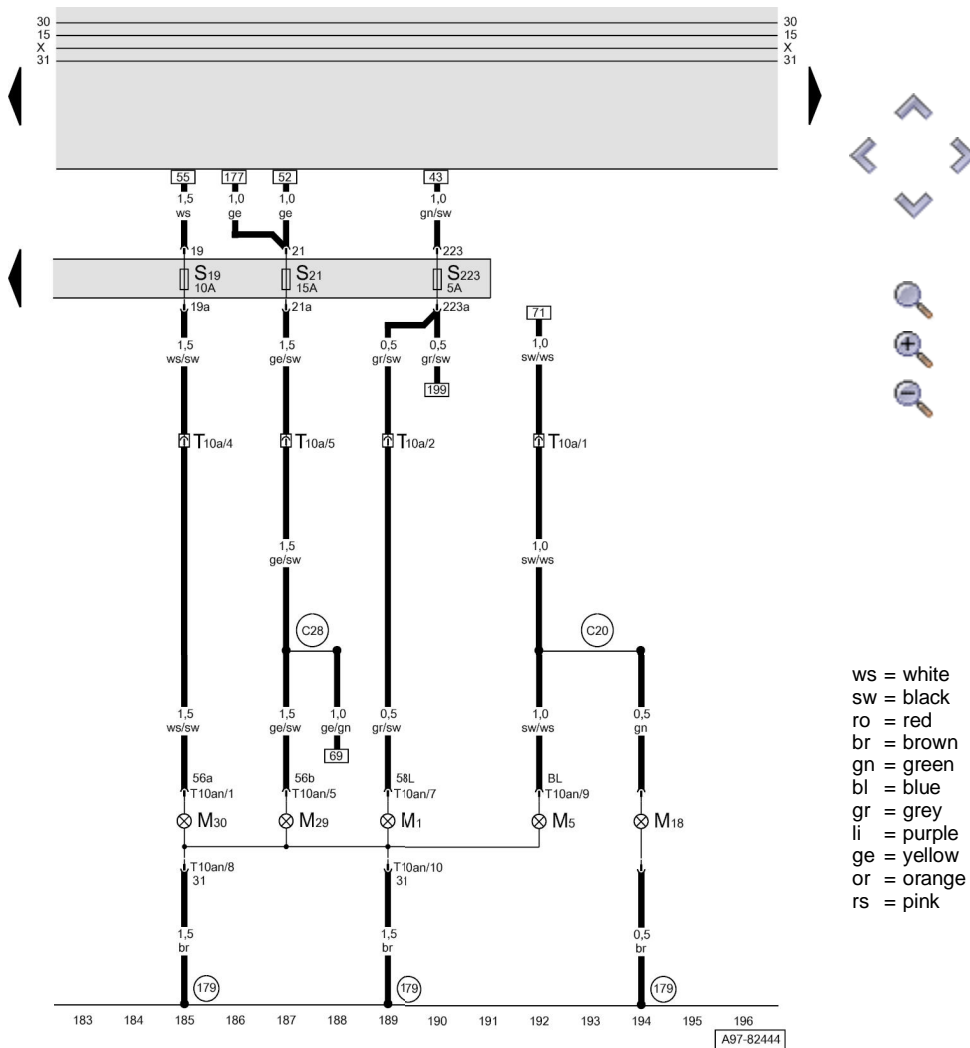**Fuse box, left headlight**

- M1 - Side light bulb, left
- M5 - Turn signal bulb, front left
- M18 - Side turn signal bulb, left
- M29 - Dipped beam bulb, left
- M30 - Main beam bulb, left
- S19 - Fuse in fuse box
- S21 - Fuse in fuse box
- S223 - Fuse 23 in fuse box
- T10a - 10-pin connector, pink, connector point, A pillar, left
- T10an - 10-pin connector, on headlight, left
- 179 - Earth connection, in left headlight wiring harness
- C20 - Connection (turn signal, left), in headlight wiring harness
- C28 - Connection -1- (56b), in headlight wiring harness

Current Flow Diagram

No. 1 / 16

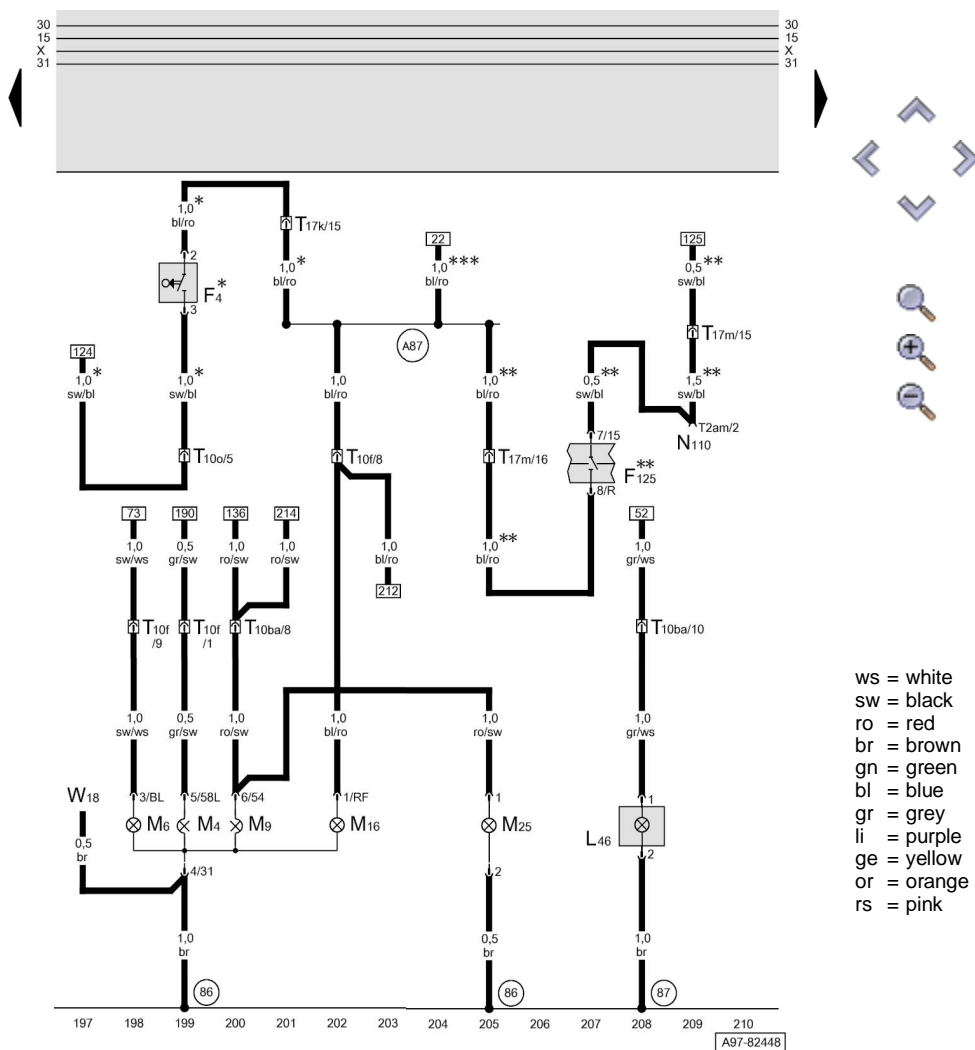


F4	- Reversing light switch
F125	- Multi-function switch
L46	- Rear fog light bulb, left
M4	- Tail light bulb, left
M6	- Turn signal bulb, rear left
M9	- Brake light bulb, left
M16	- Reversing light bulb, left
M25	- High level brake light bulb
N110	- Selector lever lock solenoid
T2am	- 2-pin connector, black, on selector lever console
T10f	- 10-pin connector, brown, connector point, A pillar, left
T10o	- 10-pin connector, brown, connector point, electronics box, plenum chamber
T10ba	- 10-pin connector, blue, connector point, A pillar, left
T17k	- 17-pin connector, red, connector point, electronics box, plenum chamber
T17m	- 17-pin connector, blue, connector point, A pillar, right
W18	- Luggage compartment light, left
86	- Earth connection -1-, in rear wiring harness
87	- Earth connection -2-, in rear wiring harness
A87	- Connection (RF (reversing light)), in dash panel wiring harness
*	- Models with manual gearbox
**	- Models with automatic gearbox 01V, 01L
***	- Models with automatic gearbox: multitronic® 01J

Audi A6

Current Flow Diagram

No. 1 / 17

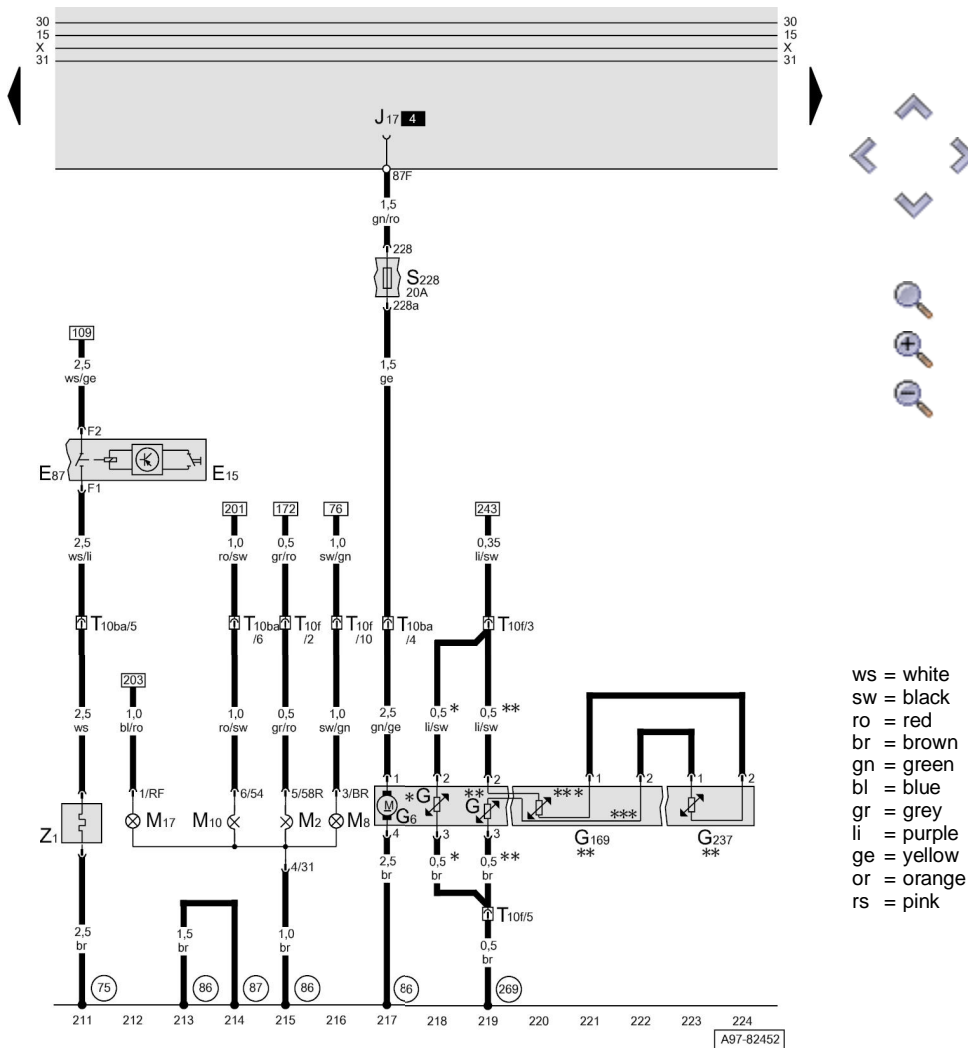


Right tail light, fuel pump, fuel gauge senders, heated rear window

- E15 - Heated rear window switch
- E87 - Control and display unit for air conditioner
- G - Fuel gauge sender
- G6 - Fuel pump (pre-supply pump)
- G169 - Fuel gauge sender -2-
- G237 - Fuel gauge sender -3-
- J17 - Fuel pump relay
- M2 - Tail light bulb, right
- M8 - Turn signal bulb, rear right
- M10 - Brake light bulb, right
- M17 - Reversing light bulb, right
- S228 - Fuse 28 in fuse box
- T10f - 10-pin connector, brown, connector point, A pillar, left
- T10ba - 10-pin connector, blue, connector point, A pillar, left
- Z1 - Heated rear window
- 75 - Earth point, rear pillar, right
- 86 - Earth connection -1-, in rear wiring harness
- 87 - Earth connection -2-, in rear wiring harness
- 269 - Earth connection (sender earth) -1-, in dash panel wiring harness
- * - Models with front-wheel drive
- ** - Models with four-wheel drive
- *** - Wiring in fuel tank

Audi A6

Current Flow Diagram

No. 1 / 18

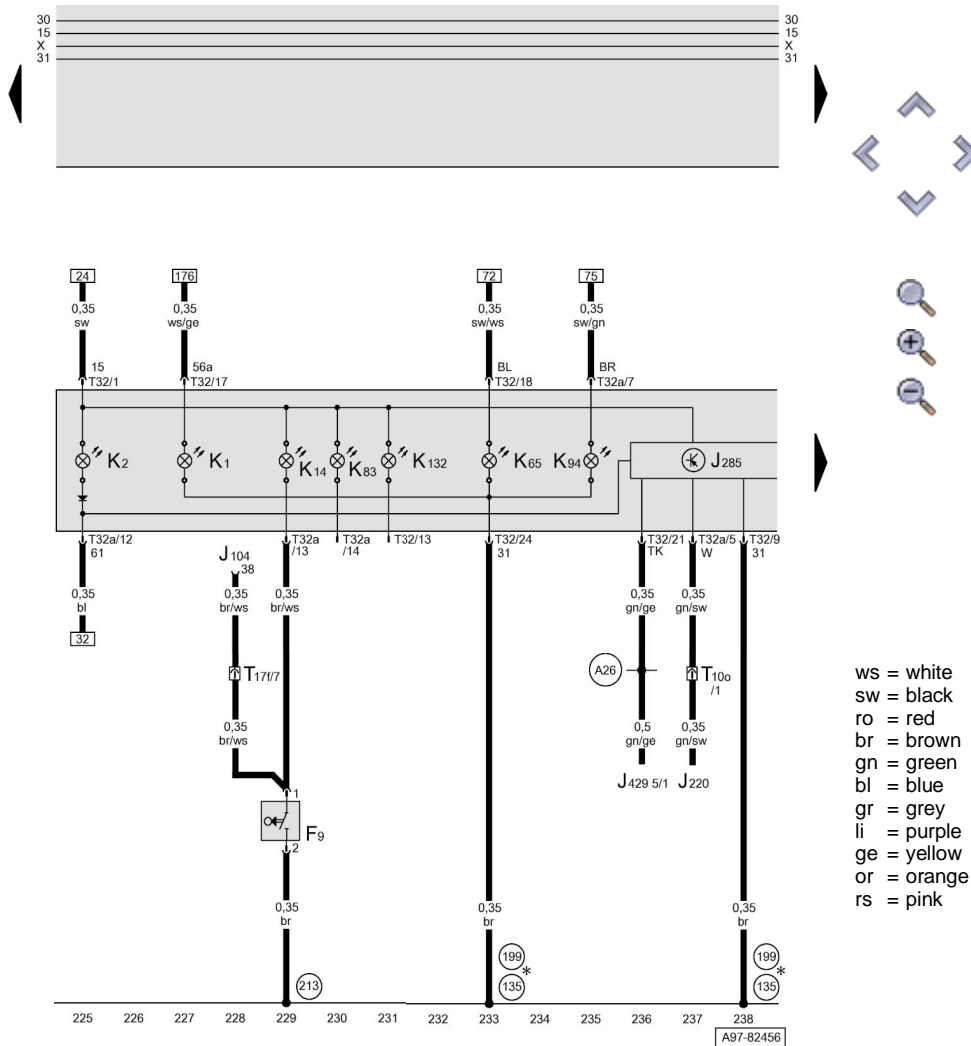


Dash panel insert, warning lamps

- F9 - Handbrake warning switch
- J104 - ABS with EDL control unit
- J220 - Motronic control unit
- J285 - Control unit with display in dash panel insert
- J429 - Central locking control unit
- K1 - Main beam warning lamp
- K2 - Alternator warning lamp
- K14 - Handbrake warning lamp
- K65 - Left turn signal warning lamp
- K83 - Fault warning lamp for self-diagnosis/exhaust emissions
- K94 - Right turn signal warning lamp
- K132 - Electronic power control fault lamp
- T100 - 10-pin connector, brown, connector point, electronics box, plenum chamber
- T17f - 17-pin connector, black, in 8-point relay carrier, behind driver's storage compartment
- T32 - 32-pin connector, blue, on dash panel insert
- T32a - 32-pin connector, green, on dash panel insert
- 135 - Earth connection -2-, in dash panel wiring harness
- 199 - Earth connection -3-, in dash panel wiring harness
- 213 - Earth connection -4-, in dash panel wiring harness
- A26 - Connection (door contact switch/driver's side), in dash panel wiring harness
- * - Both possible

Audi A6

Current Flow Diagram

No. 1 / 19

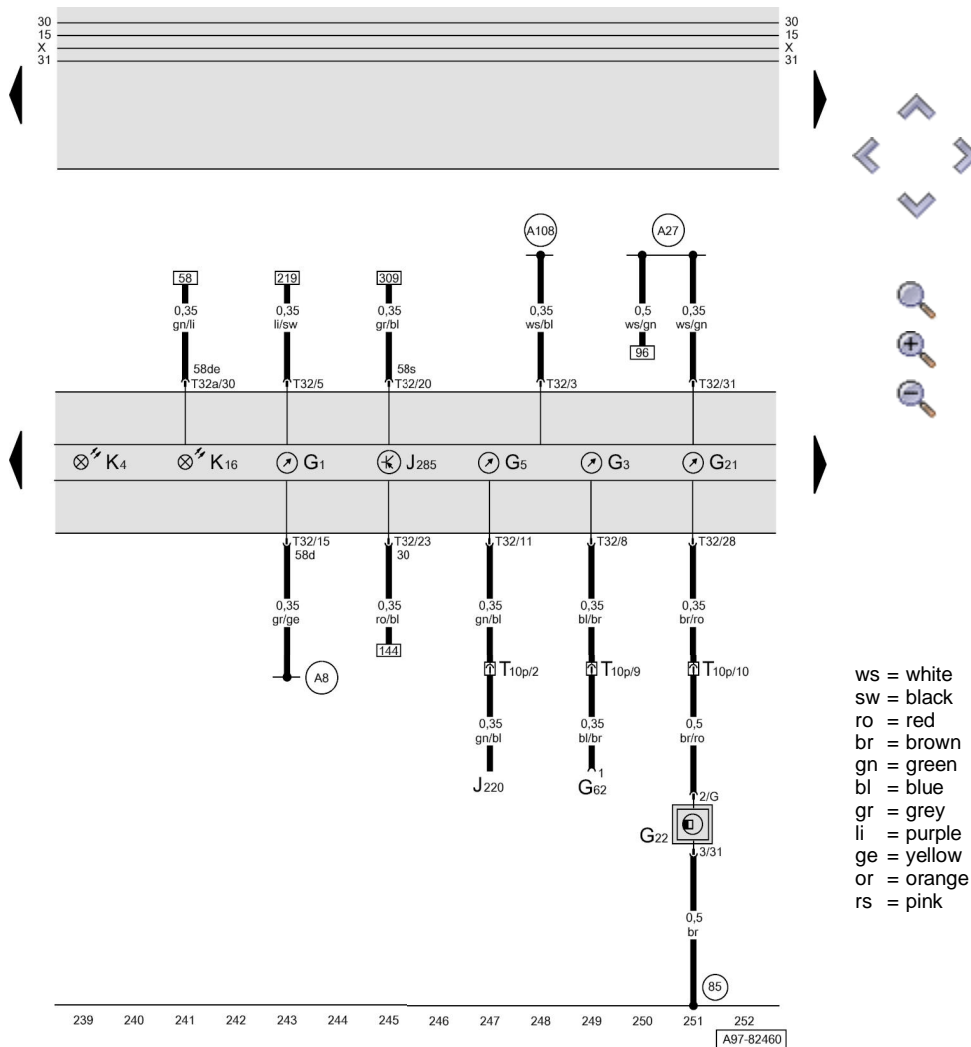


Dash panel insert, fuel gauge, coolant temperature gauge, rev. counter, speedometer

- G1 - Fuel gauge
- G3 - Coolant temperature gauge
- G5 - Rev. counter
- G21 - Speedometer
- G22 - Speedometer sender (Hall sender, on gearbox)
- G62 - Coolant temperature sender
- J220 - Motronic control unit
- J285 - Control unit with display in dash panel insert
- K4 - Side light warning lamp
- K16 - Reserve fuel warning lamp
- T10p - 10-pin connector, black, connector point, electronics box, plenum chamber
- T32 - 32-pin connector, blue, on dash panel insert
- T32a - 32-pin connector, green, on dash panel insert
- 85 - Earth connection -1-, in engine compartment wiring harness
- A8 - Positive (+) connection (58d), in dash panel wiring harness (display illumination)
- A27 - Connection (speed signal), in dash panel wiring harness
- A108 - Connection (speed signal), in dash panel wiring harness

Audi A6

Current Flow Diagram

No. 1 / 20

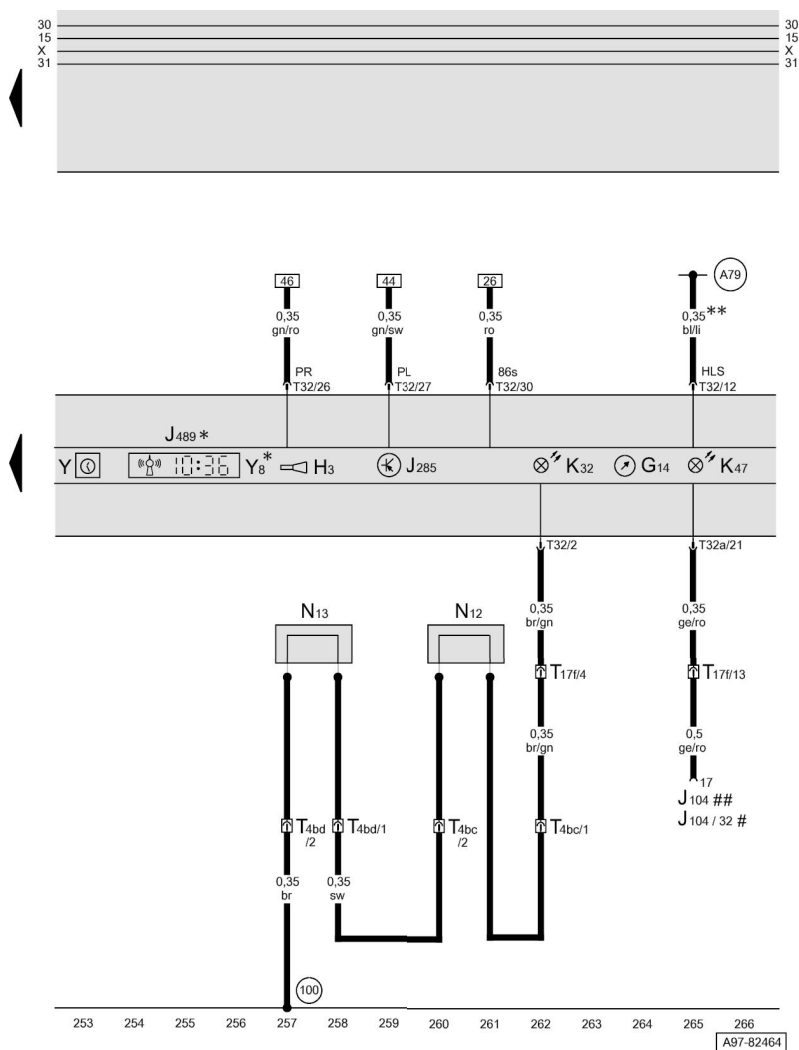


Dash panel insert, analogue clock, brake pad/lining wear warning, radio controlled clock

- G14 - Voltmeter
 - H3 - Buzzer/gong
 - J104 - ABS with EDL control unit
 - J285 - Control unit with display in dash panel insert
 - J489 - Radio controlled clock receiver
 - K32 - Brake pad/lining warning lamp
 - K47 - ABS warning lamp
 - N12 - Brake pad/lining wear indicator, right (shear element)
 - N13 - Brake pad/lining wear indicator, left (shear element)
 - T4bc - 4-pin connector, black, for speed sensor, front left
 - T4bd - 4-pin connector, black, for speed sensor, front right
 - T10ba - 10-pin connector, blue, connector point, A pillar, left
 - T17f - 17-pin connector, black, in 8-point relay carrier, behind driver's storage compartment
 - T32 - 32-pin connector, blue, on dash panel insert
 - T32a - 32-pin connector, green, on dash panel insert
 - Y - Analogue clock
 - Y8 - Radio controlled clock
 - 100 - Earth connection -1-, in ABS wiring harness
 - A79 - Connection (hot light switch), in dash panel wiring harness
- * - Models with radio controlled clock
- ** - Models with auxiliary heater
- # - ABS 5.3 (allroad models)
- ## - ABS 5.7

Audi A6

Current Flow Diagram

No. 1 / 21

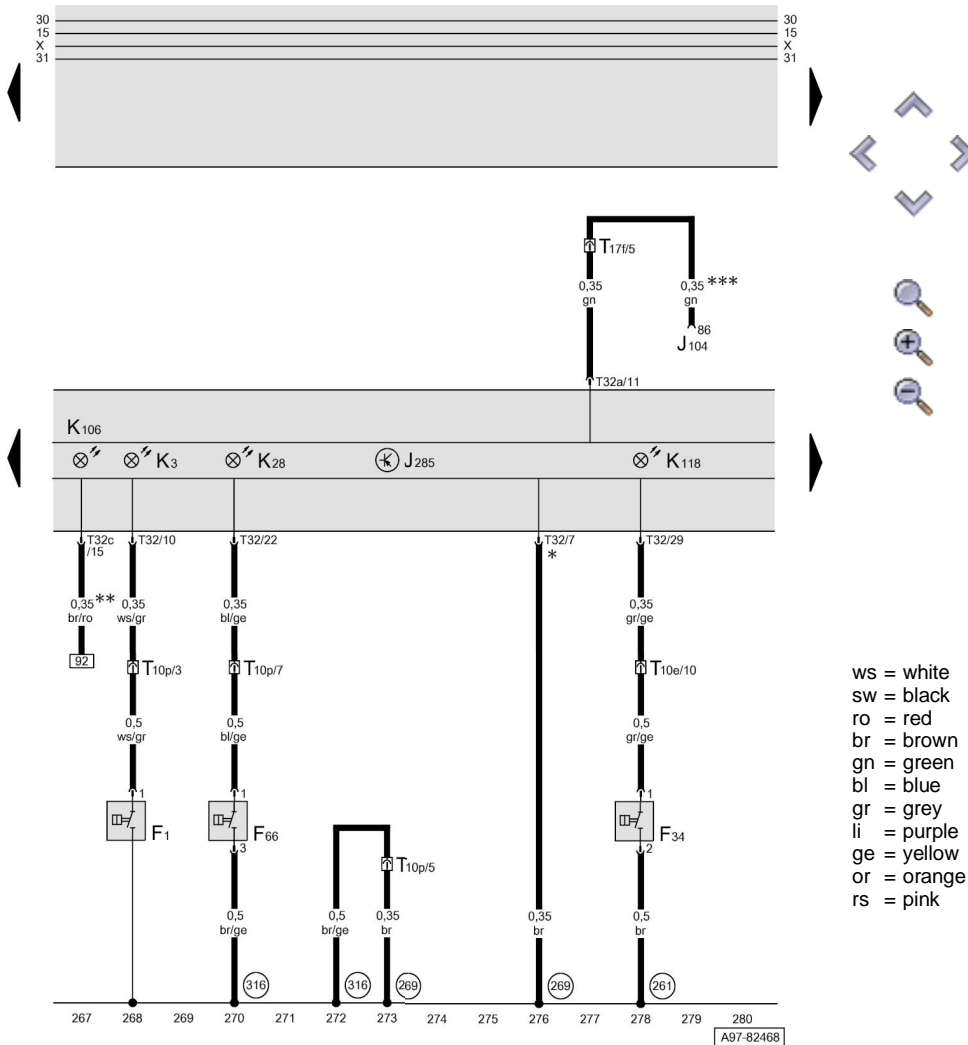


Dash panel insert, oil pressure switch, coolant shortage indicator switch, brake fluid level warning contact

- F1 - Oil pressure switch
- F34 - Brake fluid level warning contact
- F66 - Coolant shortage indicator switch
- J104 - ABS with EDL control unit
- J285 - Control unit with display in dash panel insert
- K3 - Oil pressure warning lamp
- K28 - Coolant temperature/coolant shortage warning lamp
- K106 - Washer fluid low warning lamp
- K118 - Brake system warning lamp
- T10e - 10-pin connector, purple, connector point, A pillar, left
- T10p - 10-pin connector, black, connector point, electronics box, plenum chamber
- T17f - 17-pin connector, black, in 8-point relay carrier, behind driver's storage compartment
- T32 - 32-pin connector, blue, on dash panel insert
- T32a - 32-pin connector, green, on dash panel insert
- T32c - 32-pin connector, grey, on dash panel insert
- 261 - Earth connection, in heated washer jet wiring harness
- 269 - Earth connection (sender earth) -1-, in dash panel wiring harness
- 316 - Earth connection (sender earth -2-), in engine wiring harness
- * - Sender earth output
- ** - Models with driver information system
- *** - Only applies to allroad models with ABS 5.3

Audi A6

Current Flow Diagram

No. 1 / 22

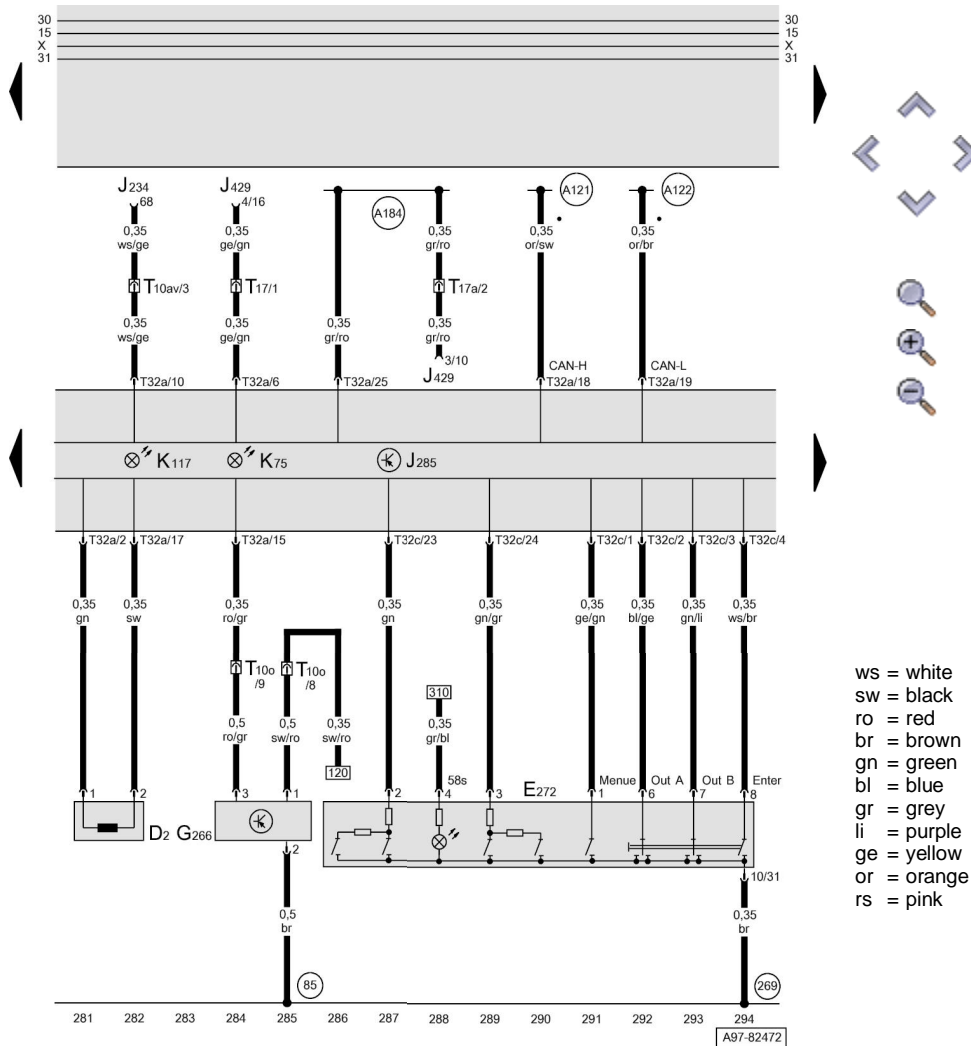

Dash panel insert, immobilizer reading coil, oil level/oil temperature sender, function selection switch II in centre console

- D2 - Immobilizer reading coil
- E272 - Function selection switch II, in centre console
- G266 - Oil level thermo sender, service interval
- J234 - Airbag control unit
- J285 - Control unit with display in dash panel insert
- J429 - Central locking control unit
- K75 - Airbag warning lamp
- K117 - Immobilizer warning lamp
- T10o - 10-pin connector, brown, connector point, electronics box, plenum chamber
- T10av - 10-pin connector, yellow, connector point, A pillar, right
- T17 - 17-pin connector, orange, connector point, A pillar, right
- T17a - 17-pin connector, brown, connector point, A pillar, right
- T32a - 32-pin connector, green, on dash panel insert
- T32c - 32-pin connector, grey, on dash panel insert
- 85 - Earth connection -1-, in engine compartment wiring harness
- 269 - Earth connection (sender earth) -1-, in dash panel wiring harness
- A121 - Connection (high bus), in dash panel wiring harness
- A122 - Connection (low bus), in dash panel wiring harness
- A184 - Connection (bonnet contact switch), in dash panel wiring harness
- - CAN bus (data wire)

Current Flow Diagram

No. 1 / 23



E87	- Control and display unit for air conditioner
J217	- Automatic gearbox control unit
J234	- Airbag control unit
J285	- Control unit with display in dash panel insert
J429	- Central locking control unit
J453	- Multi-function steering wheel control unit
T10av	- 10-pin connector, yellow, connector point, A pillar, right
T16a	- 16-pin connector, diagnosis connection
T17	- 17-pin connector, orange, connector point, A pillar, right
T17m	- 17-pin connector, blue, connector point, A pillar, right
T32a	- 32-pin connector, green, on dash panel insert
135	- Earth connection -2-, in dash panel wiring harness
199	- Earth connection -3-, in dash panel wiring harness
A76	- Connection (diagnosis wire K), in dash panel wiring harness
A159	- Connection (L), in dash panel wiring harness
*	- Models with automatic gearbox 01V/01L
**	- Models with multi-function steering wheel
#	- Both possible

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Audi A6

Current Flow Diagram

No. 1 / 24

Basic wiring for radio, connection for switch illumination, shelf illumination

- J104 - ABS with EDL control unit
- L120 - Shelf illumination
- L121 - Cup holder illumination
- S237 - Fuse 37 in fuse box
- T2m - 2-pin connector, brown, behind dash panel, centre
- T8f - 8-pin connector, black, radio connector III
- T17d - 17-pin connector, grey, connector point, A pillar, left
- T17f - 17-pin connector, black, in 8-point relay carrier, behind driver's storage compartment
- T17r - 17-pin connector, white, behind dash panel, centre
- W - Interior light, front
- W13 - Reading lamp, front passenger's side
- W19 - Reading lamp, driver's side
- 213 - Earth connection -4-, in dash panel wiring harness
- 610 - Earth point (radio), below centre console, front
- A19 - Connection (58s), in dash panel wiring harness (switch illumination)
- A76 - Connection (diagnosis wire K), in dash panel wiring harness
- # - ABS 5.3 (allroad models)
- ## - ABS 5.7

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

